

How to use Sony DSC-P10 Cyber-shot




1. Click the power button to turn on the digital camera.



2. To be able to take pictures with the camera, turn the knob and select the green camera icon.



3. To view the image to be taken, you can look at the big screen or the small screen depending on your preference. Check the image below.

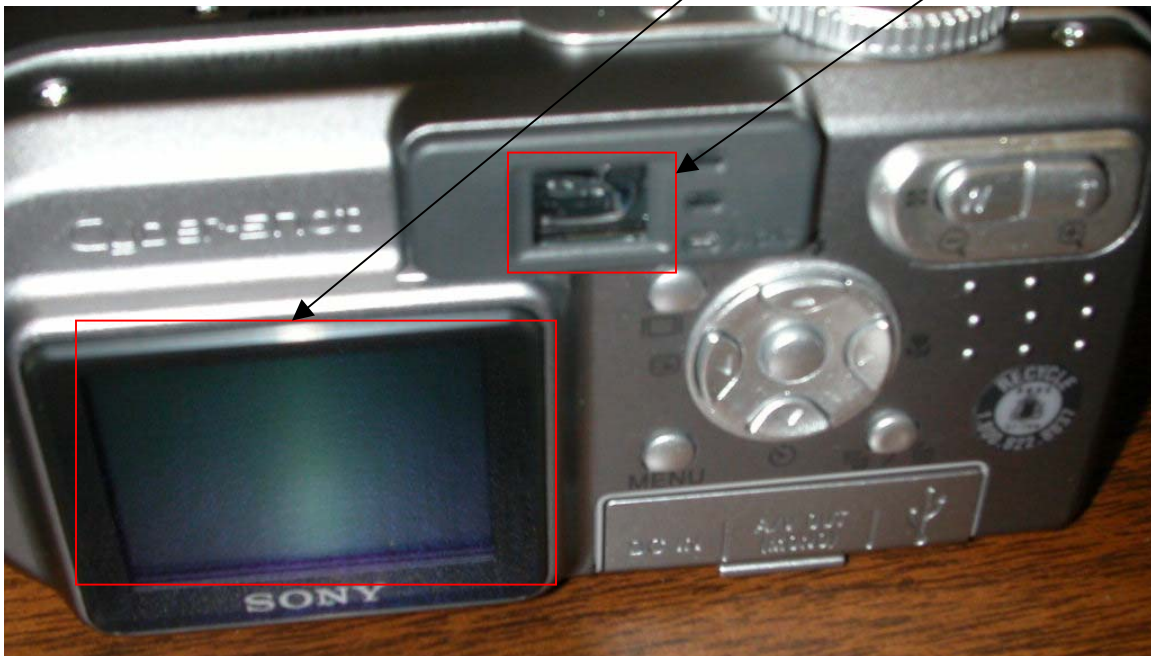

4. To take a picture when ready, click the round button as shown by the picture below.




5. To zoom in/out click the W and T buttons as seen on the image.



6. To view the image taken previously, turn the knob handle and select the arrow-looking icon as seen below.




7. Select the left and right keypad buttons (see image below) to navigate and see all the images previously taken.

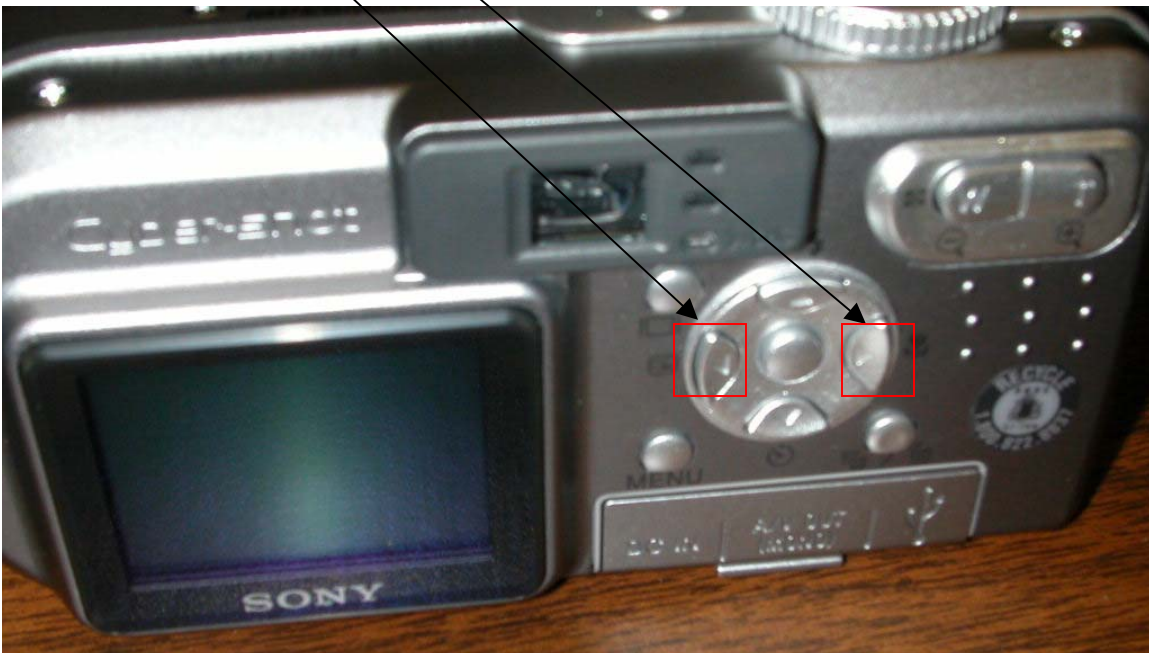


8. To download the image to a computer, insert the USB cable into the camera.



9. Plug the other end of the USB cable in the computer's USB port and turn on the camera.

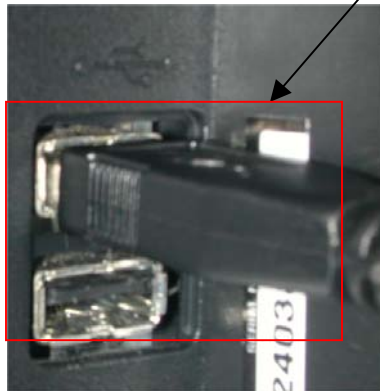

10. It will then automatically download the images to your **My Documents \ Image Transfer** Folder (assuming that the Sony DSC driver was installed properly).

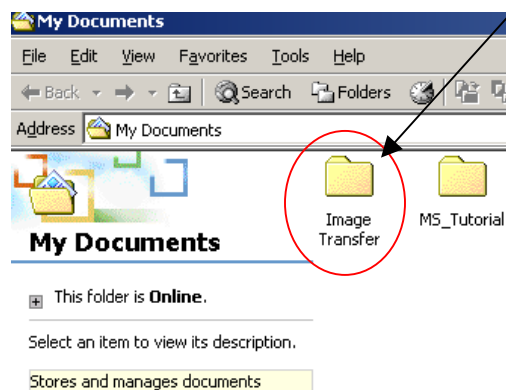

NOTE: If after plugging the USB cable in the camera and the computer a error message is displayed, saying that you need administrative privileges, unplug the cable and plug it back in. This should resolve the problem.